INSTALLATION AND MAINTENANCE MANUAL

Idema Underwater lights

B	20.10.15	Re-Approved (ECO-0000812)	EBL	HR
A	08.05.15	Approved (ECO-0000724)	EBL	HR
Rev	**Date**	**Issued**	**Issued by**	**Approved by**

Document no.:	DC10000864	**Document part no.:**	10001193	**Project no.:**	88074-01

For a thorough introduction of Your AKVA product, we ask that all users read this entire manual. If questions occur, contact us!

The information in this document is subject to change without notice and should not be construed as a commitment by AKVA group ASA.

AKVA group ASA assumes no responsibility for any errors that may appear in this document.

In no event shall AKVA group ASA be liable for incidental or consequential damages arising from use of this document or of the software and hardware described in this document.

We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden.

This document can also be read and downloaded from our web site, see www.akvagroup.com/products/user-manuals

© 2015 AKVA group ASA (NO)

Table of contents

1 Safety 4
1.1 Safety symbols 4
1.2 Receiving new equipment 5
1.3 Personnel safety 5
1.4 Product and equipment safety 6
1.5 Oil inside the BlueLed 100W and 400W 6
1.6 Relevant standards 7
1.7 Disinfecting equipment 7

2 Introduction 8
2.1 How to use this manual 9
2.2 About AKVA group 10
2.3 About Idema Underwater lights 11

3 Suspension for connection box 16
3.1 For SubLite Standard 2000W 16
3.2 For SubLite Integra 250W/400W/1000W 16

4 Power connection SubLite 17

5 Luminaire suspensions 18

6 Service and maintenance 20
6.1 Change light bulb 21
6.2 Change male contact BlueLED 100W and 400W 23
6.3 Change anodes – BlueLED 400W 23
6.4 Overview for maintenance, service intervals 23
6.5 Maintenance registration 24
6.6 Record of changed o-rings, luminaire and other parts 25

Appendix A - Index 26
Appendix B - Deviation form 27
Appendix C - Notes 28
Appendix D - Contact information 30

1 Safety

Safety for the users of our products, is top focus when developing new products and user manuals in AKVA group.

Therefore, we strongly recommend that everyone that is going to be using it, carry out repairs, service and maintenance on the product, as well as everyone working in the area where the product is installed or being used, reads this entire manual, and especially this safety chapter.

This recommendation is based on both personnel safety, as well the desire to keep the products in order as long as possible, by avoiding any damages risked if the safety instructions are not followed.

1.1 Safety symbols

These safety symbols are used in this manual:

Information

Show caution, danger of minor personnel injuries and damages to equipment

Warning - may cause personnel injuries

Danger! Will cause dangerous situations and danger for personnel

1.1.1 Other symbols used in this manual

Go to or see page or chapter for further instructions or more information

1.2 Receiving new equipment

Always check that the delivery is complete according to the service note. If the order is not complete or if any other errors are discovered, contact AKVA group immediately. Contact information is found in the back of this manual.

1.3 Personnel safety

Everyone who is working with or around the Akvasmart Rotor Spreader must undergo training regarding how to use the equipment, and also be aware of all dangers and consequences related to misuse. Owner and farm manager are responsible for informing all personnel about the contents of this manual.

Never lighten the luminaire in surface position or above water. Never look straight at a lightened luminaire, that may cause eye damage.

Personal safety equipment, such as antiskid foot wear and floating garments, are mandatory when working on and by the cage, for instance when working on the rotor spreader.

To avoid damages to equipment and injuries to personnel during installation, maintenance and other tasks performed to the Idema Under water Lights, all instructions provided from AKVA group in this manual must be followed. Current laws for the country where the equipment is being used, also have to be followed.

1.4 Product and equipment safety

All equipment must be treated as described in this manual. The parts mentioned in this chapter are critical components, and poor treatment of these as well as neglecting safety instructions may cause damages to the entire product and surrounding equipment.

1.4.1 Suspensions

Make sure that ropes are not in touch with other equipment or other ropes inside the cage, such as the rotor spreader, camera or sensor suspensions and cables. This avoids interfering damages during bad weather and gnawing.

1.4.2 Luminaire and glass

Always control that the luminaire is complete and free of any damage before it is used. The luminaire must be fully submerged in water prior to ignition.

Overheated glass can start to crack if it is exposed to rapid cooling.

1.4.3 Cable

The cable must be damage free when it is connected to power. The cable must not have any bends, tears or breaks after installation.

The cable is not designed to lift the luminaire. This applies to handling on land and after the luminaire has been installed. Always use lifting ropes with the underwater lights.

1.5 Oil inside the BlueLed 100W and 400W

Please note that the luminaire is filled with silicon oil.

1.6 Relevant standards

1.6.1 General standards

Mandate for electric equipment published by the Product and el-safety Inspectors (NO: Forskrift om elektrisk utstyr utgitt av Produkt- og elektrisitetstilsynet) (ISBN 82-91057-17-0).

1.6.2 Safety standards

EN 60598-2-1 (Luminaires part 2: Particular requirements Section 1 – Fixed General Purpose Luminaries)
EN 60598-1+A1 (Luminaires, General requirements and tests)

1.6.3 EMC standards

EN 55015 (Limits and methods of radio disturbance characteristics of electrical lighting and similar equipment)

EN 61000-3-2 (Limits for harmonic current emissions (equipment input current <16A per phase))

EN 61000-3-3 (Limits, Limitation of voltage changes, voltage fluctuations and flicker in public low voltage supply systems, for equipment with rated current $3L 16 A per phase and not subject to conditional connection.)

EN 61547 (Specification for equipment for general lighting purposes, EMC immunity requirements)

1.7 Disinfecting equipment

If any of the equipment, cables, ropes or other belonging equipment is being moved to a new location, it is decreed by law to disinfect everything to prevent contamination. We recommend rinsing with fresh water after disinfection, because the disinfectants are strong chemicals that may damage the surface materials.

2 Introduction

This user manual is part of the equipment delivered with Idema Underwater lights. Keep the manual for as long as the equipment is being used, and make sure that all changes to the equipment are being noted in the back of this manual.

Thank you for choosing AKVA group ASA as supplier for your underwater light system. Do not hesitate contacting us for more information regarding installation, use or maintenance for Idema Underwater lights or any other AKVA product.

The purpose of this manual is to make the user install and maintain Idema Underwater lights in a safe and economical way. The manual will show how to install and maintain the product, as well as hopefully answer most day to day questions. If there is anything relevant this manual does not explain or answer, please contact us for assistance and help to find a solution to any problems. Contact the AKVA service department, your subcontractor, your local AKVA office or our main office in Norway for assistance and help.

2.1 How to use this manual

This manual describes how to install and maintain the Idema Underwater lights in the best and safest possible way. This entire manual must be read and understood by ALL users prior to installation of the product. Site owner and farm manager are responsible for that all site personnel and users know and understand the contents of this manual.

Before the first chapter, is a table of contents. The headlines works as links to their respective chapters in the .pdf-file.

Chapter 1 is the most important chapter of this manual, and includes safety precautions ensuring safest possible use. Chapter 2 contains information on AKVA group and Idema Underwater lights, as well as this manual instruction.

Chapter 3 contains instructions to how the connection box for power must be attached to the cage handrail, and in chapter 4, power connection procedures are explained. How to suspend the underwater lights is shown in chapter 5 and chapter 6 contains full maintenance overview with instructions, frequencies, plans and forms for registration of executed maintenance tasks.

Four appendixes are found in the back of the manual: Index, with links to the rest of the manual in the .pdf-document, a deviation form for all deviations with the system, pages for notes about new and extra information are also in the back of the manual and AKVA contact information.

This entire manual must be read and understood prior to installation of the Idema Underwater lights, as well as used as aid during installation and maintenance

2.2 About AKVA group

With four main brands, AKVA group ASA is a world leading supplier of technical aquaculture equipment. Since 1980 we have developed and produced fish farming equipment, both for cages at sea and for land based hatcheries. AKVA represents an industrial standard, which is presumed to be the turn key to the future. Research, project management, fast deliveries and customer follow-up have been our focus to ensure that we contribute to a positive development within the agriculture industry. Our goal is to deliver the best possible and most cost efficient equipment in order to keep preserving sustainable farming.

We have a wide variety of products, for example: plastic and steel cages, high pressure washers, net washers, boats, feed barges, feeding systems, cameras, sensor systems, under water lighting, software for fish farming and recycling systems.

AKVA has a continuous development of products, and we continue to improve product safety, functions, range of use and reliability. The purpose of this manual is to enable users to install and maintain Idema Underwater lights in a safe and economic way.

All of our equipment is pre-installed, tested and delivered from our own production department. This means that our customers have total control over which components you can choose from, grouping collocation, testing and deliveries. Our production staff consists of people with great expertise and engagement for producing the best possible products. Having our own production site provides excellent service in case something should go wrong, or if assistance is required. Our service staff is available over telephone or on location to assist whenever necessary. Safety, both for users and equipment is main focus when AKVA group develops products and product manuals.

2.3 About Idema Underwater lights

Natural light affects the fish's perception of season and controls important biological processes like smoltification, pubertiming, growth rate as well as feed utilization. Artificial light contributes to influence these processes so that they occur at the optimal time for the commercial operations.

Idema Underwater Lights are often used for salmon, trout, cod and other fast growing species in large cage farms. Light treatment is also successfully used on smolt and juvenile in tanks and cages of different types and sizes. Correct use of Underwater Lights in aquaculture ensures reduced amounts of mature fish in addition to much faster growth and more effective feed exploitation.

Lights installed in various depths ensures a perfect light spread. Accurate and even light spread in the biomass is vital in tanks with high density and humus loaded water.

High quality Underwater Lights have excellent light spread, simple bulb replacement, functional design and a rugged constructions. Power connection for underwater lights are standard IP67 plug which enables simple installation. Cable length is standard 35 and 55 meters, both shorter and longer cables may be provided.

2.3.1 Recommended light for Salmon cages

For when using halogen bulbs:

Size cage	Surface areal	Light by 3W/m2
90m cage	654m2	1935W - 2000W
120m cage	1146m2	3438W - 4000W
157m cage	1962m2	5886W - 6000W

2.3.2 Available models

BlueLed 100W

This light has blue light rays, the highest penetration in seawater, and therefore the greatest efficiency. LED (Light Emitting Diode) is often called "eternity light" and is the most cost effective light solution on the market – and a perfect match to a diesel generator. The light diodes have extremely long duration with a expected service life of up to 70.000 hours, and after 100.000h the effect has decreased only 10%!
This means; no bulb changing for many years ahead.

Recommended use: Tanks and smaller cages.

BlueLed 400W

This is a light with blue light rays is our newly developed luminaire for the sea cages. This Nemco approved luminaire is utilizing the newest High Intensity LED technology with eight times more effective light source than the BlueLED 100W.
The blue color has proven to be the most efficient when it comes to effect on biology in the fish. LED luminaires can provide more effective output from each luminaire compared to other lamp technologies. It saves cost on power generators, uses less power and uses less copper in the installations. All this in addition to a long service life of the luminaire and the fact that after 100.000h the effect of LED has decreased only 10%!

Recommended use: Medium and large cages.

SubLite Integra 250/400

The smallest member of the SubLite family. The light can be offered in two luminosities for smolt, juvenile and smaller locations. This model is often used in cod farming with lights placed at various depths for a smooth distribution of light all over the cage. The light bulb and the electronic control device are integrated in the housing compartment and have a service time in the region of 5.000 hours.

Recommended use: Tanks, smaller and medium cages

SubLite Integra 1000 W

Our bestselling light for salmon farms and the most rugged light unit in the market. It is placed at various depths and the powerful light ensures an excellent spread. The light bulb and the electronic control device are integrated in the housing and are easy to install. This unit also has a service life in the region of 5.000 hours.

Recommended use: Medium and large cages

Standard 2000 W

The most powerful solution we offer. It provides extra strong lighting in large cages where there is a need for strong light conditions without using a lot of separate units. It features solid construction with a separate connection box and a service life in the region of 5.000 hours.

Recommended use: Large cages

2.3.3 Technical specifications

Specifications	BlueLed 100W	BlueLed 400W
Operating Voltage	230 VAC/50Hz (24DC)	230 VAC/50Hz (60DC)
Starting current 0,5 second	1,0A (230W)	1,8A (400W)
Starting current 1 second	2,5A (115W)	1,8A (400W)
Operating current (2 minutes)	0,5A (106W)	2,15A (480W)
Total efficiency	115W	480W
Service life with even color	appr. 70.000 hours	appr. 70.000 hours
Light source	1080 LED	184 LED
Color temperature	20.000 K	20.000 K (480 nm Blue)
Luminosity	-	-
Weight, light housing	8,5kg	11kg
Weight with cable	14kg (appr.2L oil)	19kg (appr.2L oil)
Weight connection box	-	-
Size, length + Ø	641mm + 120mm	641mm + 120mm
Main housing material	Aluminum 6082 T6	Aluminum 6082 T6
Main housing density	2,7g/cm3	2,7g/cm3
Material in connection box	-	-
Pyro Borocilicate glass 3.3	ISO 3585-2,23g/cm3	ISO 3585-2,23g/cm3
Cable, standard length	PUR 3G1,5 35m or 55m	PUR 3G1,5 35m or 55m
Cooling fluid	Silicone oil	Silicone oil
Recommended use	Tanks + smaller cages	Medium and large cage

Specifications	Integra 250/400W	Integra 1000W	Standard 2000W
Operating Voltage	230 VAC/50Hz	230 VAC/50Hz	230 VAC/50Hz
Starting current (0,5 second)	2,45A (563W)/ 3,0A (690W)	8,0A (1840W)	13,0A (2990W)
Starting current (1 second)	1,9A (437W)/2,0A (460W)	6,4A (1472W)	12,1A (2783W)
Operating current (2 minutes)	1,3A(299W)/ 1,8A (414W)	5A (1150W)	9,35A (2150W)
Total efficiency	275W / 460W	1065W	2070W
Service life with even color	appr. 5.000 hours	appr. 5.000 hours	appr. 5.000 hours
Light source	HQI-T 250D/ HQI-T 400D	QI-T 1000D	HQI-T 2000D
Color temperature	5300K / 6100K	6000K	4400K
Luminosity	20.000lm/ 35.000lm	85.000lm	190.000lm
Weight, light housing	7kg / 10kg	21.6kg	11kg
Weight with cable	11kg / 14kg	28kg	17kg
Weight connection box	-	-	19.2kg
Size, length + Ø	648mm + 140mm	818mm + 180mm	642mm + 140mm
Main housing material	POM 1,41g/cm3	POM 1,41g/cm3	POM 1,41g/cm3
Main housing density	DIN 53479 - L15	DIN 53479 - L15	DIN 53479 - L15
Material in connection box	-	-	Fire coated aluminum
Pyro Borocilicate glass 3.3	ISO 3585 2,23g/cm3	ISO 3585 2,23g/cm3	ISO 3585 2,23g/cm3
Cable, standard length	PUR 3G1,5 35m or 55m	PUR 3G1,5 35m or 55m	PUR 3G1,5 35m or 55m
Cooling fluid	-	-	-
Recommended use	Tanks + medium and small cages	Medium and large cages	Large cages

3 Suspension for connection box

Antiskid footwear and safety garments, such as safety vest, are mandatory for working on or by the cage edge

3.1 For SubLite Standard 2000W

Do not install the SubLite Standard 2000W connection box inside sealed cabinets

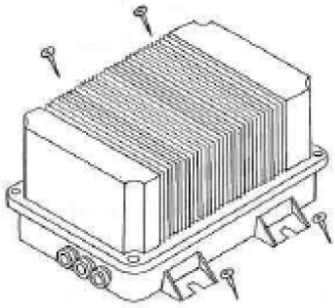

Sealing in the connection box can cause overheating.

Due to its weight it is recommended that the connection box is mounted horizontally as shown in the figure.

3.2 For SubLite Integra 250W/400W/1000W

Can also be hung by the hand rail.

1 Insert the bolts from the back side
2 Mounting brackets behind the pipe
3 Rail
4 Connection box
5 Under water light cable.

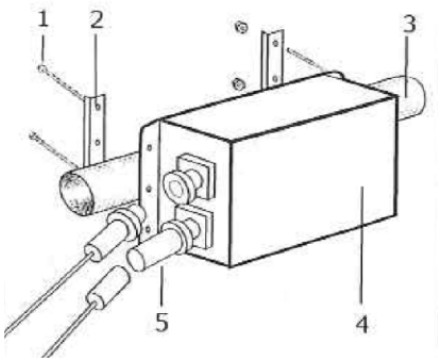

4 Power connection SubLite

Antiskid footwear and safety garments, such as safety vest, are mandatory for working on or by the cage edge

If the installation contains long cable stretches, make sure that the voltage is over 200 VAC where the luminaire is connected

The luminaire must only be connected to the armature contact on the connection box, and not to the main power

The Idema Under Water Lights may only be used with a 230 VAC 50 HZ power connection.

Connection termination:

1 OUT to light

2 230V AC in

3 Possible to continue transfer of 230 V.

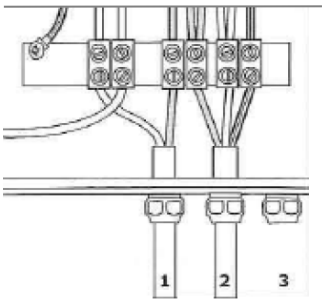

In the 2000W connection box, termination is found only inside the box.

Idema Underwater Lights are connected to power via one of two methods:

a Directly from barge to cage

b From barge to closest cage, with distribution from cage to cage (three-phased).

All light power cables are made of PUR and is available with 35 or 55 meter lengths.

5 Luminaire suspensions

Antiskid footwear and safety garments, such as safety vest, are mandatory for working on or by the cage edge

Always use lifting ropes when suspending the luminaire. The lights must never be hung by the cables

Using incorrect suspensions will invalid any warranty rights

Using correct suspensions and connections, will provide desired light functions for several years ahead. The luminaires must be suspended so that it does not rotate around its own axis.

They can be suspended as a V:

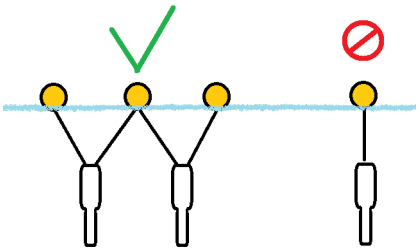

Or they may be stabilized with u-shaped suspensions:

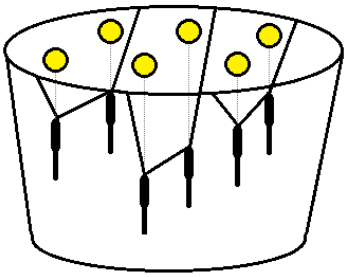

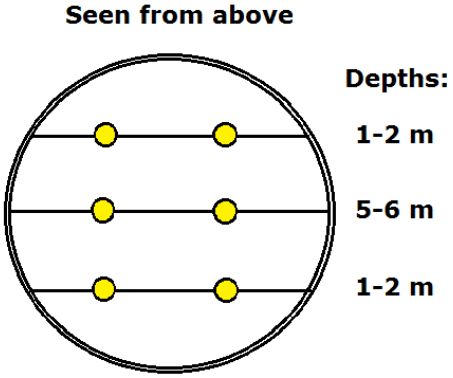

The lifting rope must be fastened correctly to the lamp, either with two ropes or with a stabilization rope that runs through both eye bolts in the lamp, and stabilized with a knot:

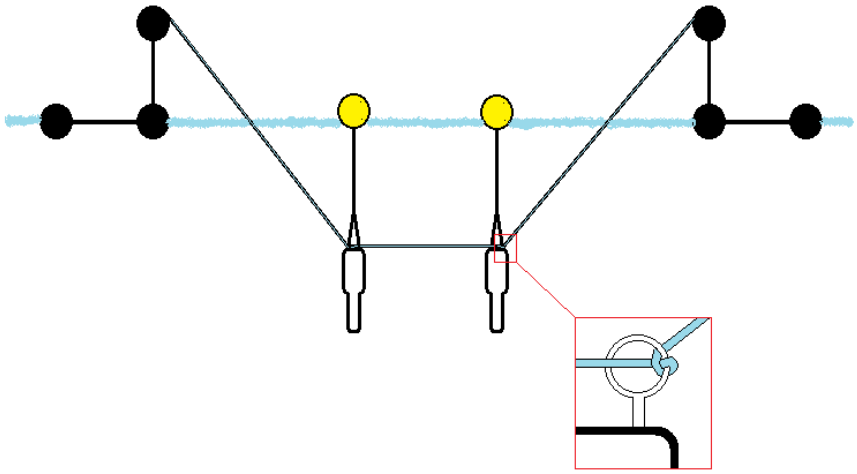

Use tape or strips to fasten the cable to the rope:

Correct method:

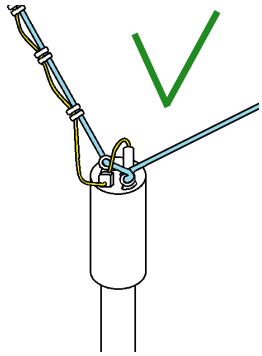

Incorrect method:

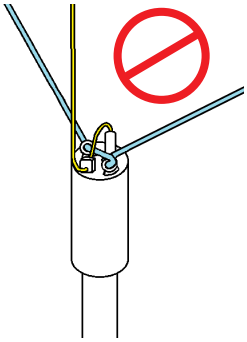

Make sure that the cables are not too tightly attached. They must hang flexibly to avoid strain caused by current affected movements in the luminaire and the cage. If a cable is fastened wrongly, and the cable is pulled off the luminaire or the bushing nipple, the luminaire will leak and the light may be damaged. Make sure that the cables does not have any tears or breaks before installation, as this may cause further damages to the cable and weaken the effect of the lamp and reduce its life span.

6 Service and maintenance

Antiskid footwear and safety garments, such as safety vest, are mandatory for working on or by the cage edge

For maintenance and service, all lamps must be brought to the barge or on land

Material and design choices for the underwater lamps are made to ensure simple maintenance.

To secure the best possible functionality and use of underwater lights, regular external cleaning is recommended.

Use warm water with a mild soap, such as washing up liquid, and a soft scrub or brush to remove fouling, sprout, shells and other filth that gets stuck on the luminaire and cable surfaces.

External maintenance must be executed regularly. We recommend taking the luminaries out of the water for check-ups and necessary maintenance once a month, and more often during the warmer sprout seasons.

The external parts (glass, POM and PUR) must be disinfected if the lamp is being moved to a new location, or in case disease has been detected in the location. We recommend that all parts are rinsed with fresh water after disinfecting.

Expected service life for the LED bulbs, is in the region of more than 70.000 hours, or 8 to 10 years.
The SubLite lights are designed to last for at least 5000 hours, and AKVA recommends that the light bulbs are changed after two seasons in the sea as shown in chapter 6.1. When changing bulb, we recommended changing the o-rings as well.

For internal maintenance beyond changing bulb and o-rings, contact AKVA group for a consultation. Contact information is found in the back of this manual.

6.1 Change light bulb

6.1.1 SubLite Standard 2000W

1 Place the hooked spanner in the holes of the tension nut. Hold the luminaire still and remove the tension nut

2 Pull off the glass

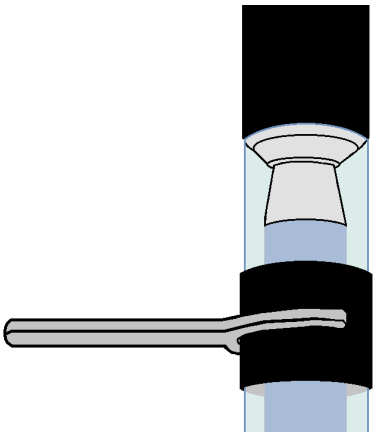

3 Lay the luminaire flat and replace the bulb

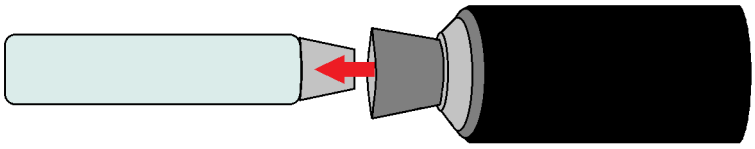

4 Lubricate the o-rings with Super Lube (or another type of teflon or silicon grease)

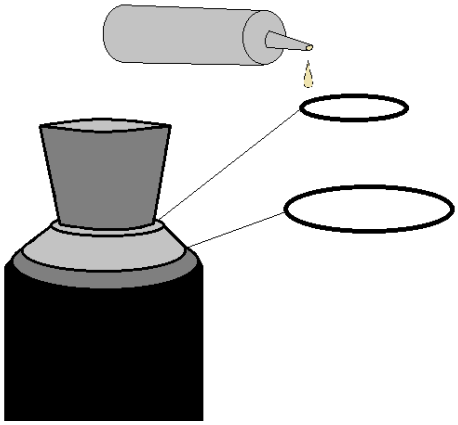

5 Carefully push the glass into the luminaire.
The bulb positioner must be placed in the bottom of the glass. Make sure that no impurities lies on the o-rings or on the glass, and ensure that the o-ring lies firmly against the glass all the way around. Hold the luminaire still and fasten the tension nut using the hooked spanner.

6.1.2 SubLite Integra 250W/4000W/1000W

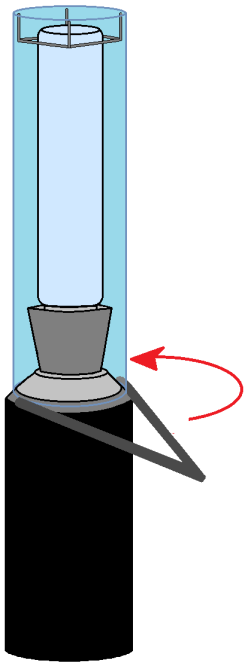

1 Place the taps of the hooked spanner in the holes of the tension nut. Carefully screw the tension nut counter-clockwise to open

There might be gas/pressure inside the lamps glass, so make sure that the opening is never directed towards a person when opening the tension nut

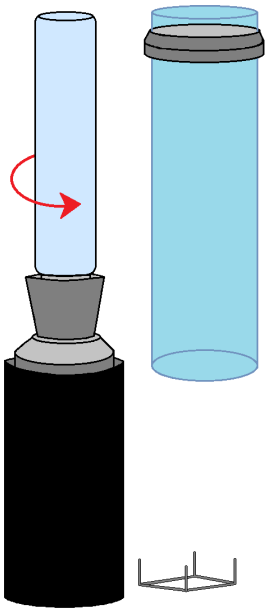

2 Lift off glass and tension nut and change the bulb. Avoid touching the new bulb with bare hands, to avoid finger marks on the glass. Wipe with methylated spirit when the bulb has been changed

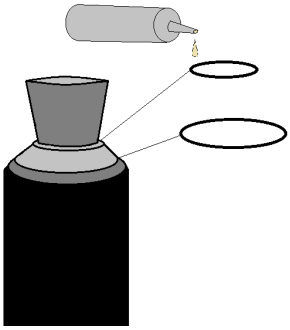

3 When changing the bulb you should also change o-rings. The o-rings must be lubricated with Super Lube. Make sure that the glass and the o-rings are clean and free from any dirt prior to fastening the tension nut

4 Before fastening the tension nut, also assure that it is correctly positioned in the threads, and that the bulb positioner is placed correctly between the glass and the bulb.

6.2 Change male contact BlueLED 100W and 400W

Replacement of the male contact must only be performed by an authorized electrician.

6.3 Change anodes – BlueLED 400W

Use a 5mm Unbraco key to release the screws, then remove and change the anodes. Refasten the screws.

6.4 Overview for maintenance, service intervals

Activity	Hours	Month	Year	Comments
Outside cleaning		1		Clean every 14th day during growth season
Change light bulb BlueLed 100W SubLite Integra 250/400W SubLite Integra 1000W Standard 2000W	 70000 5000 5000 5000			 When required After use for two seasons After use for two seasons After use for two seasons
Change anode (BlueLed 400W)				When required
Change male contact (BlueLed 100W and 400W)				When required

6.5 Maintenance registration

Make copies of this form before filling it out

Sign after the task is performed

Date	Lamp ID	Task performed	Signature

6.6 Record of changed o-rings, luminaire and other parts

Make copies of this form before filling it out

Sign after the part/luminaire is changed

Date	Part	Reason	Comment	Signature

Appendix A - Index

A

anode 23

antiskid footwear 5, 16-18, 20

B

bulb positioner 21, 22

C

cable 6, 7, 11, 16-20

cleaning 20, 22

connection box 9, 13, 16, 17

D

disinfect 7, 20

E

eye damage 5

H

halogen bulb 11

hooked spanner 21, 22

L

lifting rope 6, 18, 19

light bulb 13, 20, 21

light spread 11

luminaire 5-7, 12, 17-21, 25

M

male contact 23

O

o-ring 20-22

overheating 6, 16

S

silicon oil 6

sprout 20

T

tension nut 20-22

Appendix B - Deviation form

Make copies of this form before filling it out

Deviation no.:	

Unit:	**Producer:**	**Prod.no.:**	**Purchase year:**

Deviation description:
Follow up proposition:
Date and signature, declarer:

Follow up directed:
Status:
New action for deviation no.:
Date and signature, follow up:

Appendix C - Notes

Appendix D - Contact information

NORWAY - AKVA group ASA

Head Office

Nordlysveien 4

PO. Box 271

N-4340 Bryne

Norway

tel. +47 - 51 77 85 00

fax. +47 - 51 77 85 01

Support Hardware and AKVAconnect

tel. + 47 - 51 77 85 03

supportakvasmart@akvagroup.com

Support Fishtalk

tel. +47 - 73 84 28 20

supportfishtalk@akvagroup.com

DENMARK

AKVA group Denmark AS (Land Based)

Bødkervej 7A, 1.

7000 Fredericia, Denmark

t. +45 7551 3211

f. +45 7551 4211

AKVA group Denmark AS (Land based)

Rosklidevej 342, Building 2

2630 Taastrup, Denmark

t. +47 7551 3211

SWEEDEN

AKVA group - Agent: Modus Trading AB

Färjegårdarne 7

78461 Borlänge, Sweden

t. +46 - (0)243 883 22

f. +46 - (0)243 21 17 78

modus@dalnet.se

FINLAND

AKVA group - Agent: OY MG Trading AB

Ivisnäsplanen 2E

SF-02260 Esbo, Finland

t. +358 - 9867 68422

f. +358 - 9867 68420

ICELAND

AKVA group - Agent

Wise lausnir ehf

Borgartun 26, 105 Reykjavik, Iceland

t. + 354 545 3200

f. +354 545 3232

UK (SCOTLAND)

AKVA group Scotland Ltd.

36F Shore Street

Inverness, Scotland, UK

IV1 1NF

t. +44 (0)1463 221 444

f. +44 (0)1463 223 535

GREECE

Akvasmart/Fishtalk - Agent:

Zellas Trading Company

Dodekanisou Str., GR-174 56

Alimos, Athens, GREECE

t. +30 - 210 7014881

f. +30 - 210 7012666

zellastrading@ath.forthnet.gr

TURKEY

AKVA group Kültür

Balıkçılığı Ekipmanları Ltd. Şti.

Yeni Küçük Sanayi Sitesi No:1-C19 Baharlı Köyü

48200 Milas, Muğla, TURKEY

t. +90 - 252 - 374 - 6434

f. +90 - 252 - 374 - 6432

TUNISIE

AKVA group - Agent: Sociètè Mèditerranèenne

d`Etudes et Conseils

72, Avenue Habib Bourguiba

2080 Ariana, Tunisie

t. +216 71 700 453

f. +216 71 700 297

smechg@gnet.tn

CANADA

AKVA group North America Inc.

1495 Baikie Road, Campbell River

BC, V9W 1R9 Canada

t. +1 - 250-286-8802

f. +1 - 250-286-8805

AKVA group North America Inc.

5251 Duke Street, Suite 606, Duke Tower,

Scotia Square

Halifax, NS, B3J 1P3 Canada

t. +1-902-482-2663

f. +1 - 902-405-3373

CHILE

AKVA group Chile

Ruta 5 Sur Km.

1030, Puerto Montt, Chile

t. +56 - 65 250250

f. +56 - 65 257119

AUSTRALIA

AKVA group Australasia

t. +61 400 167 188

cschafer@akvagroup.com